


Full Size Fit Pattern


502600 / Cleared for Takeoff Emblem Cover

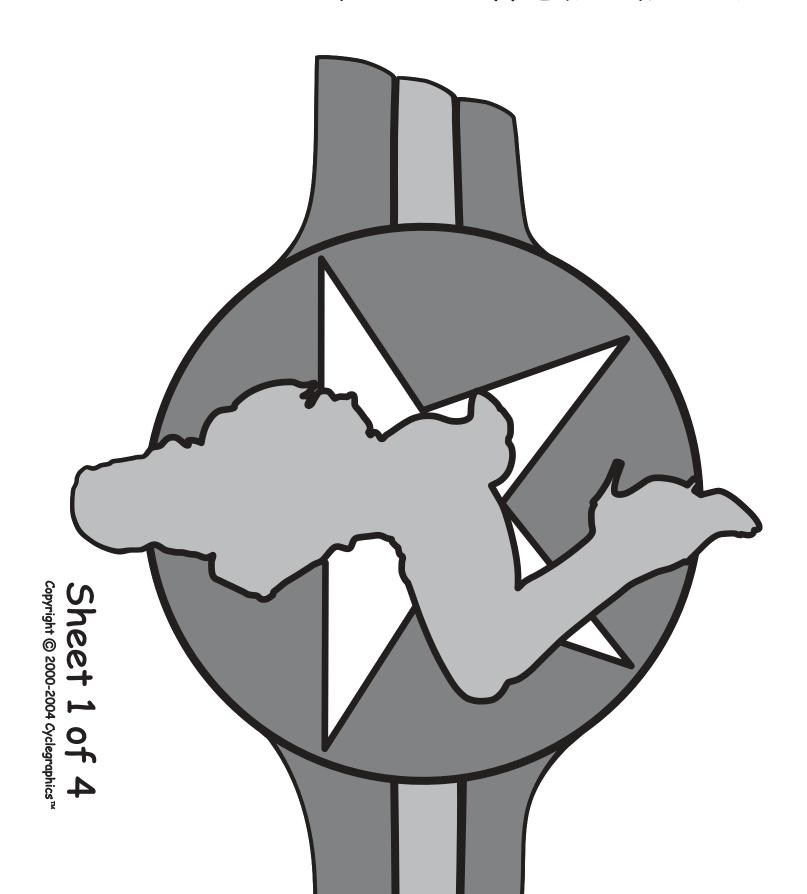


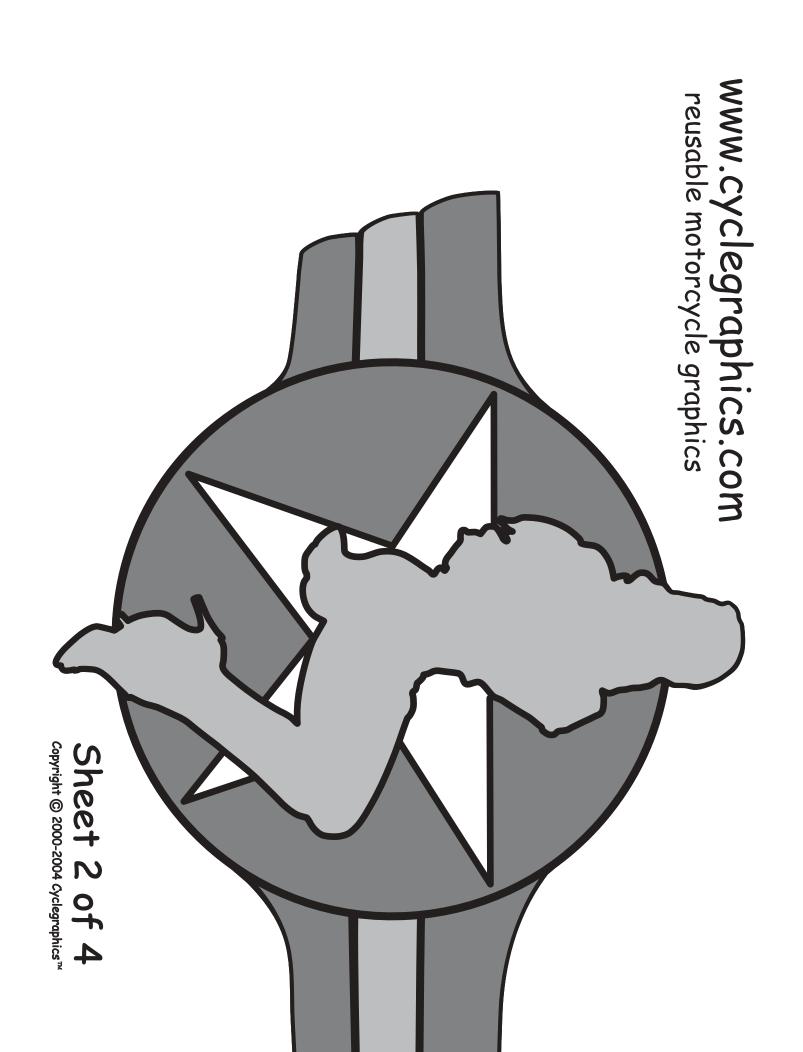

Sheet 3 of 4
Copyright © 2000-2004 Cyclegraphics Telephone

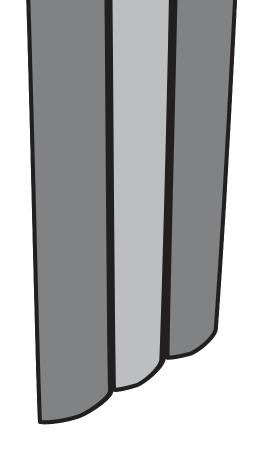


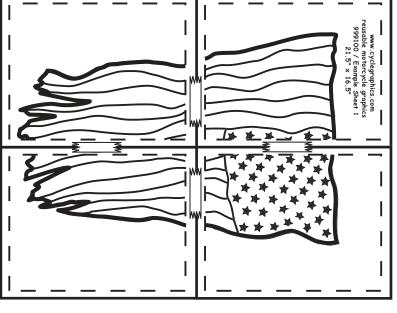

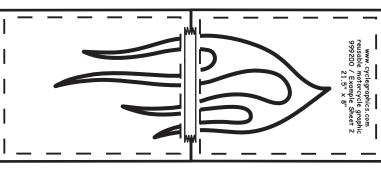

Use this full size fit pattern to:

- To see if this Cyclegraphic will fit your bike before you buy, and...
- To help visualize what this Cyclegraphic might look like on your bike
- Assist in the cutting and trimming your new Cyclegraphic around gas caps, and to vents, openings, etc...

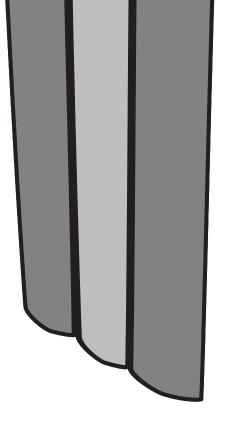

Print out this pattern on any printer using $8.5" \times 11"$ paper. Acrobat will format and tile it for you. It should print out very close the actual dimensions of the design. You will need to tape the tiled pages together as shown and cut out around the thick black line of the design , then:

To see if the design will work on your bike, simply hold it against different areas of your bike to check the fit and how it looks .

To use this pattern to help you trim the design to your bike simply hold it on the bike and mark around the area you want to trim. Cut the area out and test it against your bike. Keep trimming until you have the pattern exactly the way you want. If you mess up the pattern, no problem, just print out another one. Once you have the pattern trimmed just the way you want the design to look, lightly transfer the pattern outline to the graphic with a pen. Cut the graphic with a pair of scissors making sure you cut to the inside of your mark, so that it ends up on the throw away piece.

Sheet 4 of 4

Copyright © 2000-2004 Cyclegraphics™